

SM48D TTA Hazchem Boards for 4 wagons

Please note that the folds can be performed with smooth faced pliers. The 100 degree folds have the half etch on the inside

Safety warning.

This kit is suitable for adults only. There are small and/or sharp components. The castings and recommended solders contain lead. Observe appropriate hygiene precautions; do not eat or handle food without first washing hands. The tools and materials recommended also require the care in handling; protection for the eyes and face (dust mask) must be applied when soldering and using a mini-drill.

Parts List




Etched Fret SM48D containing 8 x Hazchem Boards

1. Release the Hazchem Board (1) from the fret and remove any residual half etch tabs.

Bend the board at the half etch line so that it has an angle of approximately 100°.

2. Drill a 1mm hole at the base of the barrel to accept the tang of the etch.


Note that there are slight variations in the position of the Hazchem Board so please check prototype photos of your chosen wagon.

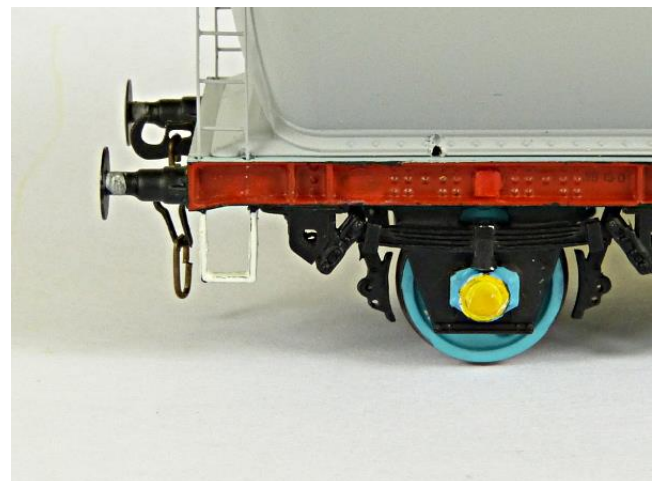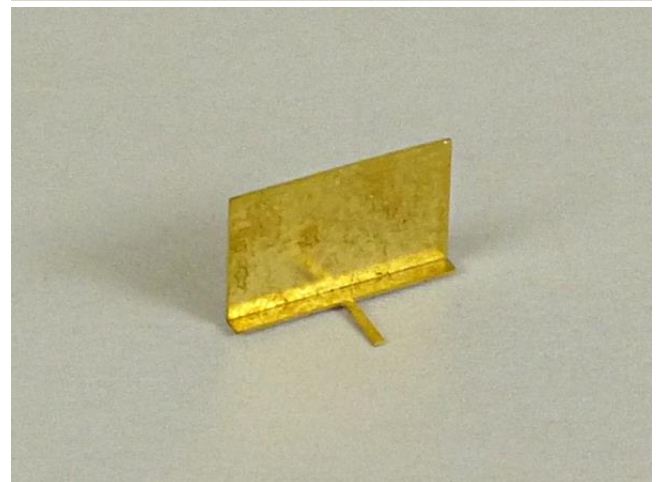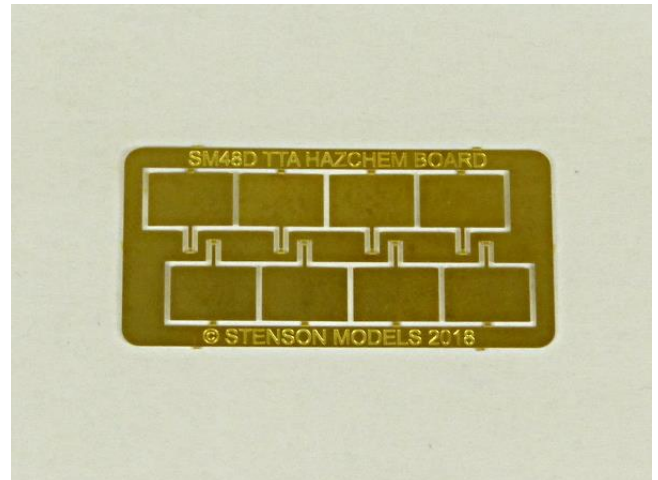


SM48D TTA Hazchem Boards for 4 wagons

3. Offer the Hazchem Board up to the wagon to ensure the angle is correct.

(I will do something about the distance the brake shoes are from the wheel!)

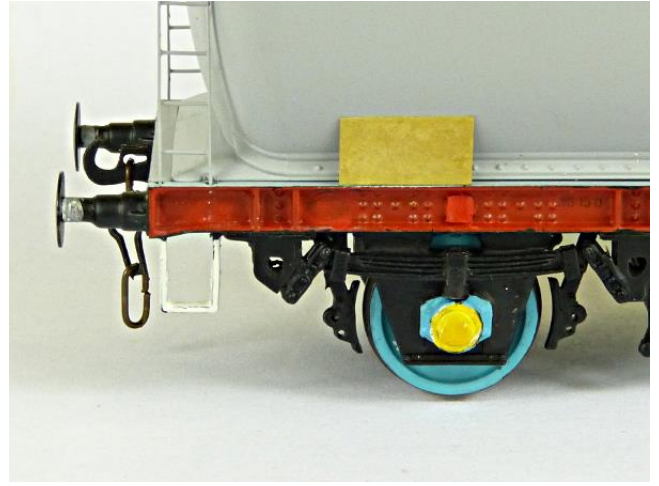

4. Paint the Hazchem Board black.

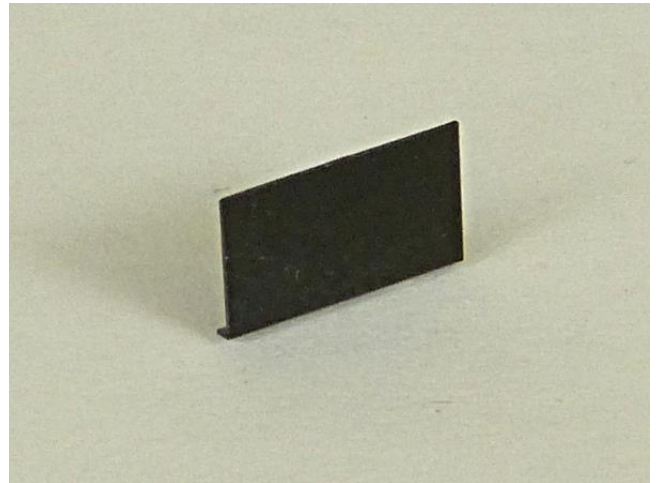

5. The Hazchem Board can now be fitted to the top of the underframe with a dab of CA glue.

Apply your chosen Hazchem transfer.

(The distance between the brake shoes and the wheel is now more acceptable.)



Email: stensonmodels@btinternet.com

Website: www.stensonmodels.co.uk