

SM98D VDA Rain Strip x 2 pairs

Safety warning.

This kit is suitable for adults only. There are small and/or sharp components. Observe appropriate hygiene precautions; do not eat or handle food without first washing hands. The tools and materials recommended also require the care in handling; protection for the eyes and face (dust mask) must be applied when soldering and using a mini-drill.

The fret contains sufficient parts for two wagons

It should be noted that a small number of VDA's have a full width rain strip across the bodyside.


For these wagon's, please use the rain strips available on Stenson Models part SM97D

1: - It is recommended to spray paint the strips black on the smooth face whilst still in the fret.

When the paint has dried, release the strips removing any remains of the half etches. Then touch in any exposed brass by hand

2: - Place some paper between the wagon body and the strip. The strip will be located by half etch on its underside

Sparingly apply CA glue from the tip of a scalpel blade to locate the strip in place, removing any excess immediately. Take care not to get glue on the paper.

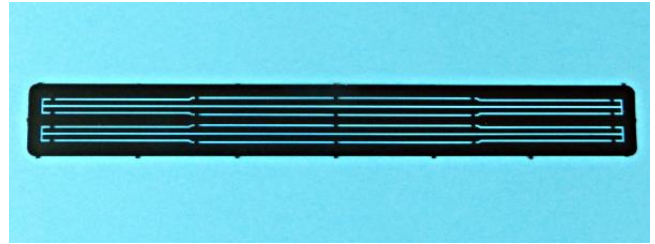

Email: stensonmodels@btinternet.com

Website: www.stensonmodels.co.uk